STILLWATER
SIDEWALLS

PART	FABRIC	ITEM #
SIDEWALL WITH RECESSED F-CLIP AND VELCRO		
8x10	White	17435
8x10	Clear	17374
10x10	White	18229
10x10	Clear	18230
PVC KEDER RAIL		
Breakwater Keder Rail - 10'		22784-10
Breakwater Valance - 10'		23182-10
Breakwater Valance - 20'		23182-20
SIDEWALL WITH KEDER, VELCRO, & ROLL UP STRAPS		
8x10	White	17435-BW
8x10	Clear	17374-BW
10x10	White	18229-BW
10x10	Clear	18230-BW
SIDEWALL WITH KEDER. (2) EDGE ZIPPERS, & ROLL UP STRAPS		
8x10	White	23400-BW
8x10	Clear	22594-BW
10x10	White	24565-BW
10x10	Clear	24521-BW

SIDEWALLS WITH KEDER RAIL

ROLL UP STRAPS

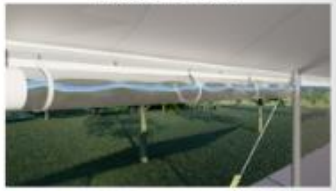

STILLWATER
INSTALLING KEDER RAIL

There are two methods of installing keder rails for sidewall usage. The first method is before the tent itself is raised. The second is for after the tent has been installed.

First Method: Once you have your tent laced together and on the ground, find your side pole locations. You will find it easiest if you slide the 10' keder rail onto the top of the fabric at this time. From one side pole location you are able to slide two keder rails in opposing directions. Once the keder rails are installed, go ahead and finish installing your tent.

Second Method: If your tent is already installed, decide on your starting point. Release the ratchet, allow the side pole to drop and to loosen the tent top. From one side pole location you are able to slide two keder rails in opposiing directions. Once you have both in, re-tighten the ratchet and repeat as often as needed.

Breakwater Keder Rail Extrusion